



P.O. Box 2907  
Kansas City, KS 66110-2907  
Telephone: 913-621-3700 · Fax: 913-621-2145

CTT Customers:

## IMPORTANT SAFETY NOTICE Attention Required

Columbian TecTank has learned of a potential safety issue with a product we offered as an accessory option with some of the manufactured tanks we supplied generally before October 2007. North Safety Products supplied Saf-T-Climb Ladder Fall Prevention Systems. If you are in receipt of this Notice we have identified you as potentially having received one of these devices with the tank(s) we supplied to you.

We are passing on to you a copy of the Safety Notice received from North Safety Products. It details the type of systems they provided which are affected, and gives instructions to identify them and take action to reduce the risk of serious injury. For additional information, we also suggest that you review the SAFE-ALERT at the following website:

[www.msha.gov/Alerts/Equipment/northfallprotection01172007.pdf](http://www.msha.gov/Alerts/Equipment/northfallprotection01172007.pdf)

Please read this information carefully. If you have any questions, please contact North Safety Products at (800) 836-8006, Option 4, between 8:30 am and 4:30 pm ET Monday through Friday or at the contact information provided in the attached notice.

If you purchased a tank with this Saf-T-Climb system from Columbian TecTank and are not the end user, **IT IS IMPERATIVE FOR YOU TO FORWARD THIS INFORMATION TO YOUR CUSTOMER OR THE END USER.**

Also, if you purchased multiple tanks from Columbian TecTank and have any questions about a specific Order Number that may be affected, please feel free to contact me so we may be of assistance.

Sincerely,



Ed Shupert  
Director Project Management  
Construction and Field Service  
Columbian TecTank

Enclosure



North Safety Products Ltd.  
26 Dansk Court  
Toronto, Ontario  
Canada M9W 5V8




Telephone: (800) 836-8006  
Fax: (800) 585-2354  
[saf-t-climb@northsafety.ca](mailto:saf-t-climb@northsafety.ca)

## **Important Safety Notice**

### **All Climbers on Saf-T-Climb Systems Must Tie-off With Shock Absorbing Y-Type Lanyards**

As a part of North Safety Products' on-going efforts to ensure our fall protection systems are the safest in the industry, we have identified certain conditions where Saf-T-Lok Sleeves or Rail may not perform properly during a fall. Under these conditions, a climber may fall farther than intended, resulting in serious injuries or death. If you have received this notice, you may have an affected Saf-T-Climb Fall Prevention System.

#### **To reduce the risk of SERIOUS INJURIES or DEATH:**

-  **North Safety is instructing ALL CLIMBERS to TIE-OFF with a SHOCK-ABSORBING Y-LANYARD (no longer than 6 feet) that is ANSI Z359.1 compliant.**
-  **For ALUMINUM rail Saf-T-Climb systems, ONLY use the Shock-Absorbing Y-lanyard. Do not use the Saf-T-Lok Sleeve.**
-  **For GALVANIZED STEEL rail and STAINLESS STEEL rail Saf-T-Climb systems, use BOTH the Shock-Absorbing Y-lanyard and the Saf-T-Climb system, including the sleeve and harness, as directed in the Saf-T-Climb Instruction Manual.**


If you are unsure what type of rail (i.e., aluminum or steel) your Saf-T-Climb system has, contact North Safety for help in identifying the material.

North Safety is continuing to investigate this issue and is currently designing an appropriate remedy. Once testing and production has been completed, North Safety will provide this remedy at no cost to existing customers of the Saf-T-Climb system who register their Saf-T-Climb systems or Saf-T-Lok sleeves with North Safety in response to this notice. In the meantime, all climbers **MUST** use a Shock Absorbing Y-lanyard (no longer than 6'). To ensure you are notified about the remedy, please register your Saf-T-Climb Fall Prevention system with North Safety at [www.saf-t-climb.com](http://www.saf-t-climb.com) or by faxing the enclosed registration form to (800) 585-2354.

If you have questions about this notice, selecting a Shock-Absorbing Y-lanyard, or proper climbing techniques, contact North Safety at (800) 836-8006, Option 4, between 8:30 a.m. and 4:30 p.m. ET Monday through Friday or visit [www.saf-t-climb.com](http://www.saf-t-climb.com).

**NORTH**

The serial number is located *near the connection point of the sleeve.*

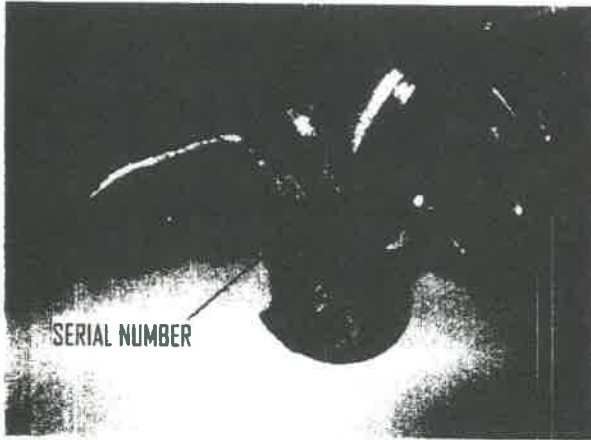

# Product Registration

## Saf-T-Climb Fall Prevention Systems Safety Notice

Please complete the following information and fax to (800) 585-2354.

**Quantity of Saf-T-Climb Systems:** \_\_\_\_\_

**Installation Location:** \_\_\_\_\_

**Installation Location Address  
(Include City and State):** \_\_\_\_\_

**Customer Name:** \_\_\_\_\_

**Customer Address:** \_\_\_\_\_

**Customer Telephone:** \_\_\_\_\_

**Customer E-mail:** \_\_\_\_\_

**Quantity of Saf-T-Lok Sleeves:** \_\_\_\_\_

**Serial Number(s):** \_\_\_\_\_

**Customer Name:** \_\_\_\_\_

**Customer Address:** \_\_\_\_\_

**Customer Telephone:** \_\_\_\_\_

**Customer E-mail:** \_\_\_\_\_

Please fill-in your preferred **Shipping Address:**

**Company:** \_\_\_\_\_

**Address:** \_\_\_\_\_

**City, ST, Zip:** \_\_\_\_\_

**Attention:** \_\_\_\_\_

**Telephone:** \_\_\_\_\_